

Retzlaff Hall Media System Equipment Guide

(Created January 26, 2020)

THERE ARE THREE REMOTES:

1. For the TVs:

- a. The remote (which is used for both TVs) will say "TCL ROKU TV".
- b. Point the remote at one TV at a time and press the Red On/Off button.
- c. The 'TV' sound volume is located on the side of this remote.

2. For the Sound Bar:

- a. The remote will say "LG SOUND BAR".
- b. Make sure the volume is turned down before you turn off the sound bar. Otherwise, when the next person turns it on, they will blow the speakers.
- c. Please turn OFF the Sound Bar after each use.

3. For the DVD player:

- a. The remote will say "SANYO BLUE RAY DISC PLAYER".
- b. Please turn OFF the Sound Bar after each use.

HOW TO WATCH THE VARIOUS AVAILABLE CHANNELS:

After turning on the TV select from the Home screen menu what you would like to watch or listen to, i.e. DVD Player for watching movies etc.

To leave a channel you have selected, hit the button with the picture of the house. (Top right side of the TV remote under the Red On/Off button). Then use the purple arrows to scroll to the TV home page.

Each square in the TV Home screen menu provides you with a different experience.

- "ET Live" - Entertainment, Interviews and News
- "TUBI" gives you movies to watch, use arrows to scroll the menu.
- "PANDORA" is not available.
- "iHeart radio"- Music
- "VEVO" - Music station with videos
- "PLUTO" - TV guide will automatically pop up.
- "ROKU" is the same as Pluto.

While watching normal TV the two televisions will not be in sync. But when using the DVD player they will be in sync.